

QUICK SLIDE OWNERS MANUAL & INSTALLATION GUIDE

Heaton Estate
Bradford Road
Brighouse
West Yorkshire
HD6 4BW

0844 5610 623
0844 5610 624

info@quickslide.co.uk
www.quickslide.co.uk

Important notes for the client, prior to use;

WARNING

Read these instructions prior to installation and operation of the folding-sliding doors.

Please ensure that while opening and closing the folding sliding doors you do not get your fingers trapped between the panels.

REMOVE KEYS AFTER UNLOCKING THE DOORS AND BEFORE FOLDING THE DOORS!

BASIC OPERATION OF QUICKSLIDE FOLDING-SLIDING DOOR WITH TRAFFIC DOOR

TO OPEN

1. Unlock the traffic door and open it 180 degrees. This door will then close on to the next door via a magnetic panel catch (providing this item was ordered).
2. Unlock the remaining intermediate door panels using the intermediate handle.
3. Fold panels pair-by-pair sliding all of the panels carefully over to the side so they are all stacked together.



TO CLOSE

As described previously but in reverse order.

1. Slide the pairs of intermediate door panels one-by-one back in to the frame so they are shut.
2. Lock each of these pairs off as you close them in to the frame.
3. The traffic door should remain open and be the last door you close.
4. Pull the traffic door closed and lift the handle upwards to engage the locking system in to the frame.

BASIC OPERATION OF QUICKSLIDE FOLDING-SLIDING DOOR WITHOUT TRAFFIC DOOR

TO OPEN

1. Unlock all internal handles.
2. Slide the panels pair-by-pair slowly to the side so that they are all stacked together.

TO CLOSE

1. Pull the handle between the panels closed so that you are working from the final set of opening panels to the first set of opening panels. Once these panels are pulled back tight against the frame, turn the handle to secure.
2. Pull the second pair of panels closed and lock in to the frame and turn the handle to secure.

QUICK SLIDE OWNERS MANUAL & INSTALLATION GUIDE

Heaton Estate
Bradford Road
Brighouse
West Yorkshire
HD6 4BW

0844 5610 623
0844 5610 624
info@quickslide.co.uk
www.quickslide.co.uk

ON SITE ASSEMBLY

- ✓ ANY DOOR SUPPLIED WITH 4 PANELS OR MORE WILL BE SUPPLIED WITH THE FRAME COMPLETE BUT THE DOOR PANELS SEPARATE.
- ✓ ANY DOOR SUPPLIED WITH 3 PANELS OR LESS WILL BE SUPPLIED WITH THE DOOR PANELS ALREADY FITTED IN TO THE OUTER FRAME.
- ✓ GLASS UNITS WILL ALWAYS BE SUPPLIED LOOSE.

INSTALLATION INSTRUCTIONS

IMPORTANT - Please ensure that the instructions are fully read and understood prior to beginning the installation of the door. If the installation guide is not followed properly, this could result in the unit not operating correctly.

CAUTION - Regulations governing the use of glazed windows, doors, storefronts and/or partitions vary widely. It is the responsibility of the building owner, architect, contractor or installer to insure that products selected confirm to all applicable codes and regulations.

Quickslide Ltd can assume no obligation or responsibility whatsoever for failure of the building owner, architect, contractor or installer to comply with all applicable laws and ordinances and safety and building codes with the exception of CE Marking.

PREPARATION OF THE OPENING

Make the aperture 15mm wider and 15mm higher than the outside frame size of the unit ordered.

Please note that the outside frame height of the required unit is measured from the underside of the sill and **NOT FROM THE FINISHED FLOOR LEVEL.**

IMPORTANT - Due to the large opening sizes, weight and movement of the panels, any application should take into consideration the following;

1. The rough opening should be level, plumb and square at all points. There should be no unevenness or bowing. Make sure that the header is not twisted. There should be no bumps on the floor. The sides should be in the same vertical plane and not offset from each other. A telescopic rule and other similar precise measuring equipment should be used to make these determinations.
2. The structural integrity of the header is critical for the proper operation. Deflection of the header should be limited to L/720th under full live and dead loads with a maximum deflection limit of 9mm.
3. A qualified engineer or architect should be used to determine the proper construction details and header to be used in your particular application.

TO AVOID FURUTRE PROBLEMS, DO NOT INSTALL THE UNIT UNTIL THE ROUGH OPENING HAS BEEN CORRECTLY PREPARED.

HANDLING OF COMPONENTS

1. Upon receipt of the products, please carry out a thorough inspection to ensure that all items have been delivered in good suitable condition.
2. Store the products in a secure, clean and dry environment and protect against defacement or damage.
3. Mark sure that the parts box supplied is not mislaid.

QUICK SLIDE OWNERS MANUAL & INSTALLATION GUIDE

Heaton Estate
Bradford Road
Brighouse
West Yorkshire
HD6 4BW

0844 5610 623
0844 5610 624
info@quickslide.co.uk
www.quickslide.co.uk

PARTS BOX CHECKLIST AND ANCILLARIES

QUANTITY	NAME OF PART
1 x per hinge (excluding wheels and guides)	External hinge plates (black)
At least 3 x keys supplied	Keys
2 x per hinge (including wheels and guides)	First fix screws (10mm x M5)
1 x per hinge (including wheels and guides)	Final fixing screw (25mm)
8 x per glass unit	Toe and Heel glazing packers
1 x traffic door (supplied with own instructions and fixings)	Magnetic panel catch
1 x per traffic door	Lifting block and screw (traffic door only)
1 x per box	Toe and Heel diagram
1 x per box	2.5mm Allen key
1 x per box	3mm Allen key
1 x pair per sill	Sill end caps (if applicable)
Suitable quantity for all panels	Glazing gasket (attached to the door or sill)

FOR ALL SYSTEMS USE APPROPRIATE SCREW OR OTHER EQUIVALENT ANCHORAGE DEVICES DEPENDING ON THE HEADER MATERIAL AND CONSTRUCTION. ANCHORAGE DEVICES SHOULD PENETRATE OR HOLD SUFFICIENTLY TO THE HEADER TO WITHSTAND NECESSARY STRUCTURAL LOADING.

INSTALLING THE SILL

1. Fit the sill end caps to the sill using a suitable silicone or super glue (not supplied).
2. Make a silicone bed on the masonry, sit the sill in to the aperture and pack underneath to make it level, then fix through the thermal break of the sill into the masonry. **(Fig1)**
3. If the thermal break of the sill sits over a cavity, then you are able to put a fixing through any point of the sill providing that it is covered by the outer frame. **We would suggest that you use the thermal break as the first choice fixing point where possible.**
4. You must ensure that you apply additional silicone sealant to the ends of the sill where it meets the masonry as this will always be the most susceptible point for water ingress.
5. When you are ready to sit the outer frame on to the installed sill, you should first run a line of silicone across the internal up-stand of the sill. **(Fig2)**



Fig 1

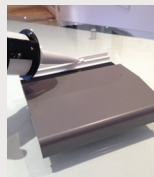


Fig 2

INSTALLING THE OUTER FRAME (REQUIRES 2 PEOPLE)

1. Remove all door panels from outer frame making a note of each one's location in the frame. 2 people should lift the outer frame in to the aperture and on to the sill.
2. If there is no sill applicable to your order then please refer to the instructions below;
 - a. Create a silicone bed on the masonry for the outer frame to sit on.
 - b. Temporarily secure the frame to the rough opening with clamps.
 - c. Make sure that the frame threshold is packed underneath to make it level and plumb (packers not supplied).
3. Pre-drill all fixing points first then fix through the thermal break of the outer frame in to the masonry using suitable frame fixings (not supplied).
4. Fix through the thermal break of the outer frame in to the sill at 100mm from each end and 600mm between.
5. Before fixing the sides and head, the outer frame should again be packed suitably to ensure it is square and plumb.
6. Fixing points should be set 100mm from each corner of the outer frame and then every 600mm between.
7. Once the outer frame is fixed in place, it should be level, square and plumb, this should be checked at every 600mm in both width and height using a suitable measuring device.

QUICK OWNERS MANUAL SLIDE & INSTALLATION GUIDE

Heaton Estate
Bradford Road
Brighouse
West Yorkshire
HD6 4BW

0844 5610 623
0844 5610 624

info@quickslide.co.uk
www.quickslide.co.uk

INSTALLING THE DOOR PANELS

1. All loose door panels will carry a numerical label which stipulates the order in which they should be fitted in to the outer frame.
2. Door '1' will have hinges on one side only which will then connect to the outer frame using the 'first fix' screws and external hinge plates (3mm Allen key is included).
3. The external hinge plates are first to be located on top of the hinge, as shown **(Fig.1)**
4. This should be repeated on the remaining hinges on door 1.
5. Repeat the above steps fixing door 2 to door 1 etc...

Hinge plate, fitted on top of the main body of the hinge

Fig 1



Main body of the hinge

INSTALLING A DOOR PANEL WITH A SLIDING POST

1. The sliding post will always be hinged to a door panel so this item does not require any additional construction.
2. This type of door panel is hinged the same way as a standard panel but should be fitted in to the outer frame on an angle so that the guides and wheels attached to the sliding post are able to clear the outer frame and sit in to the rebated channels at the top and bottom of the outer frame.

INSTALLING A DOOR PANEL WITH WHEELS & GUIDES

1. The wheels and guides will always be attached to the relevant door panel and are part of the top and bottom hinge assembly.
2. These specific hinges unlike the standard ones DO NOT require hinge plates to be fitted.
3. This door panel should be fitted in to the outer frame on an angle so that the guides and wheels attached to the sliding post are able to clear the outer frame and sit in to the rebated channels at the top and bottom of the outer frame.



Bottom Roller Hinge



Top Guide Hinge

QUICK OWNERS MANUAL SLIDE & INSTALLATION GUIDE

Heaton Estate
Bradford Road
Brighouse
West Yorkshire
HD6 4BW

0844 5610 623
0844 5610 624
info@quickslide.co.uk
www.quickslide.co.uk


FINAL FIXING

1. Once all of the door panels have been fitted, you should ensure that all of the heads of the door panels 'line-through' with each other. **(Fig1)**
2. Assuming the panels do line-through then you can fit the 'final fixing screws' to the centre hole of ALL hinges including rollers and guides. **(Fig2)**

Fig 1



Fig 2

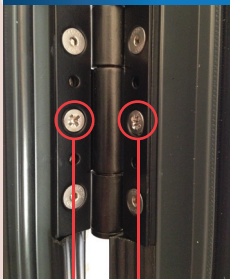

Final fixing screws

GLAZING

ALL GLAZING SHOULD BE CARRIED OUT BY A COMPETENT GLAZIER. GLAZING PACKERS AS WELL AS A TOE AND HEEL GUIDE HAVE BEEN INCLUDED.

1. Remove the pre-glazed beading (4 per sash) keeping track of which bead goes where.
2. Follow the toe and heel glazing guide for details on packer locations.
3. Fit the bottom packers only prior to the glass units being installed.
4. Lift the glass units into the door panel (2 people required).
5. Fit remaining toe and heel wedge packers.
6. Install glazing beads in the relevant locations.
7. Once all 4 sides of the glazing bead have been fitted, you will then use the 'glazing gasket' which will be push-fit between the bead and glass on all 4 sides.
8. Repeat on all remaining door panels.



FINAL CHECKS

1. After installation of the glass units, you should check the operation of the door to ensure that it is smooth with no catching door panels. If you find that a panel is catching you will need to adjust the toe and heel of the relevant glass unit.
2. You should have an 11mm gap between the edge of the door panel and the edge of the outer frame (gasket line). This is applicable to all 4 sides of the outer frame. **(Fig1)**
3. You should ensure that all locking mechanisms operate correctly (traffic doors and intermediate doors).
4. There should be no debris or residue in the bottom channel of the outer frame where the roller-bearing wheels are located.

Fig 1



ADJUSTMENTS

1. The hinges can be adjusted up and down using the 2.5mm Allen key provided. This is done via a grub screw located on the internal of the hinge. In order for the adjustment to be effective, the final fixing screws will need to be removed and the first fix screws loosened.
2. Toe and heel glass units for adjustment on the intermediate doors.

