


Composite Door Clear Opening Calculation

When surveying a door in situations where there may be restrictions for wheelchair access, it is essential you can calculate the actual clear opening width of the door.

The information below gives EXACT sizes. We suggest you allow an additional 5mm clearance to these sizes to allow for tolerances.

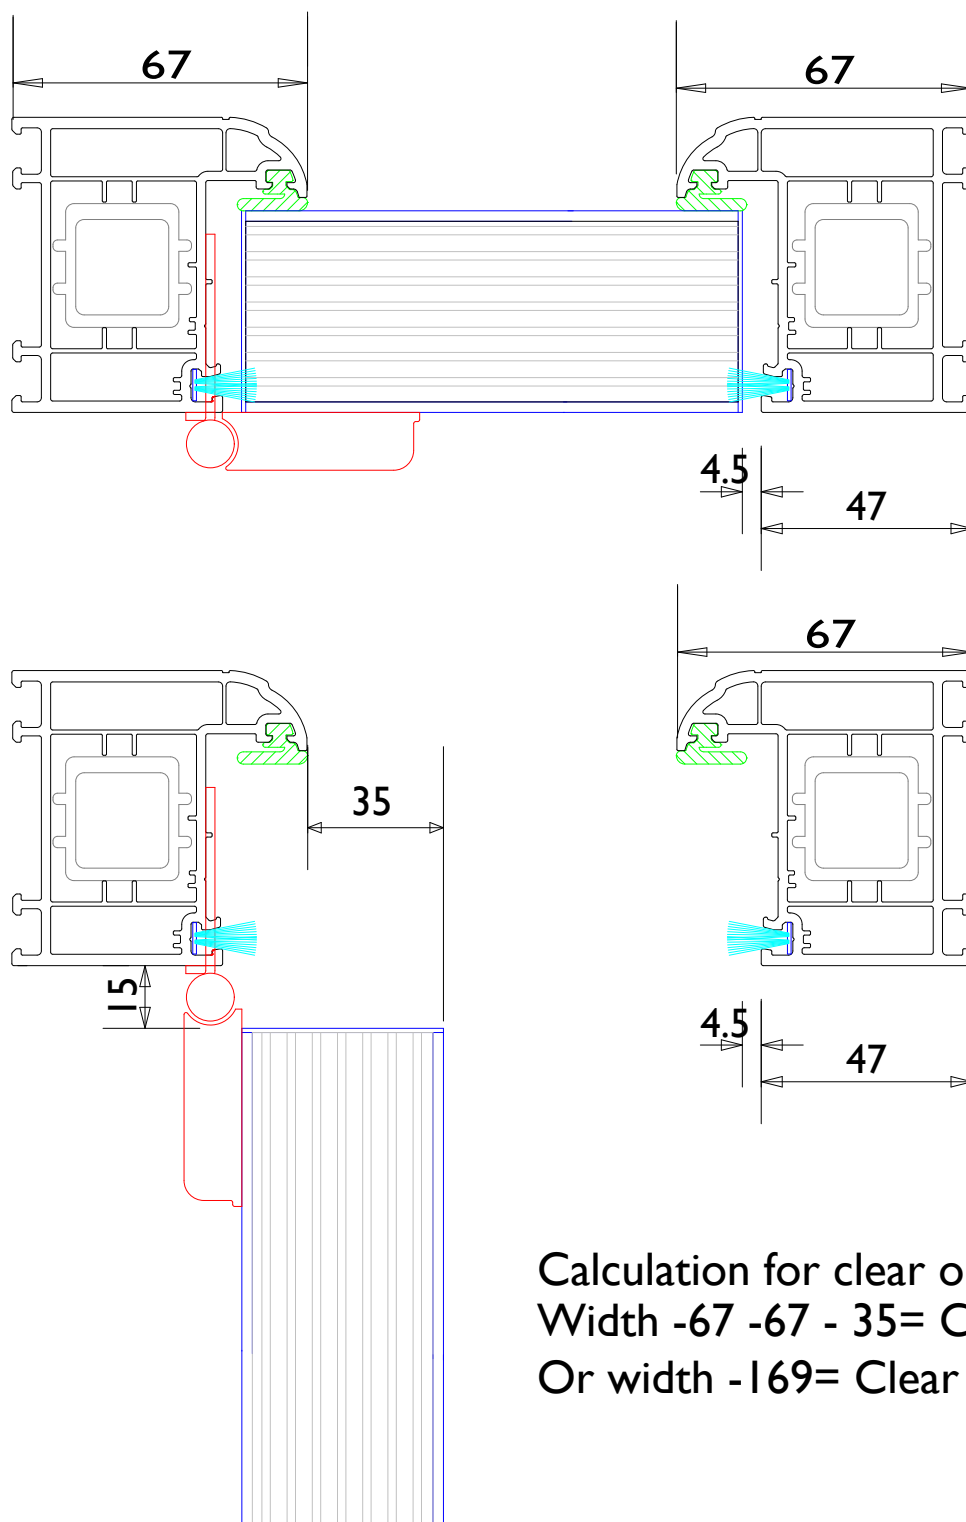

Calculation for clear opening:
Width -67 -67 - 35= Clear Opening
Or width -169= Clear Opening